



USER'S GUIDE

(MULTI FUNCTION SPORT LCD WATCH)

- Stopwatch
- Countdown Timer
- Dual Time
- Alarm
- EL Backlight
- Chime
- 100M Water Resistant
- Battery(CR2025)

BUTTONS

The operation of buttons are indicated by using the letters shown in the illustration.



- A -- Reset
- B -- Mode
- C -- Start/Stop
- D -- EL backlight

ATTENTION

1. Never try to open the case or remove its back cover.
2. Do not operate buttons underwater.
3. Should moisture appear inside the watch, have it checked immediately by your dealer, otherwise it can cause erosion of the metal parts of the watch.
4. Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.
5. Avoid exposing the watch to extreme temperatures.
6. Wipe the watch with dry, soft cloth only. Avoid allowing it to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch.
7. Avoid wearing the watch in electromagnetic, static conditions.

DISPLAY

The screen shown below:



MODE SELECTION

- Press "B" to change modes in the following Sequence:
Timekeeping Mode - Stopwatch Mode - Alarm Mode - Timer Mode - Dual Time Mode.

a TIMEKEEPING

- 12/24H Format;
- Hours, Minutes, Seconds, Date.



b STOPWATCH



c ALARM



d TIMER



e DUAL TIME

- The time for other time zone.



BACKLIGHT

- The backlight uses an EL (electroluminescent) that causes the display to glow for easy reading in the dark.

To Use EL Backlight

1. In any mode, press "D" to illuminate the display for about 3 seconds.



a TIMEKEEPING

Calendar

- In the timekeeping mode, press and hold "C" to display: Month, Date.



Time Setting

1. In the timekeeping mode, press and hold "A" until the seconds flash. (flashing indicates set mode)



2. Press "C" to reset the seconds



3. Press "B" to change to the next selection



4. Press "C" to increase the number, press and hold to increase at high speed



5. Repeat steps 3 and 4 in the following sequence:

Seconds - Hours - Minutes - Month - Date - Day - 24/12 format

6. Press "A" to exit the time setting mode.

STOPWATCH

Lap Time

In the stopwatch mode, press "C" to start the stopwatch.



To stop the stopwatch, press "C" again.



Press "A" to reset the stopwatch.



Split Time

In the stopwatch mode, press "C" to start the stopwatch.



Press "A" to display the split time, stopwatch timing continues internally.



Press "A" to clear the split time and to continue time measurement.



Repeat steps 2 and 3 to measure the multi split time.

Press "C" to stop the stopwatch.

C ALARM

Alarm and Chime

In the alarm mode, press "C" to on/off the alarm and chime in the following sequences:
Alarm & Chime off -
Alarm on - Chime on -
Alarm off - Chime on -
Alarm & Chime off.



Alarm Time Setting

1. In the alarm mode, press and hold "A" until the hour flashes.



2. Press "C" to increase the hour, press and hold to increase at high speed.



3. Press "B" to select the minutes.



4. Press "C" to increase the minutes, press and hold to increase at high speed.



5. Press "A" to exit the alarm time setting mode.

d COUNTDOWN

Countdown Time Setting

1. In the countdown mode, press and hold "A" until the hour flashes.



2. Press "C" to increase the hour, press and hold to increase at high speed.



3. Press "B" to select the minutes.



4. Press "C" to increase the minutes, press and hold to increase at high speed.



5. Press "B" to select the seconds.



6. Press "C" to increase the seconds, press and hold to increase at high speed.



7. Press "A" to exit the countdown mode.



To Use Countdown Time

1. Press "C" to start the countdown.



2. Press "C" to pause the countdown.

e TIMEKEEPING

Dual Time Setting

1. In the dual time mode, press and hold "A" until the hour flashes.



2. Press "C" to increase the hour, press and hold to increase at high speed.



3. Press "B" to select the minutes.



4. Press "C" to change the minutes, (press once to change to 30 minutes)



5. Press "A" to exit the dual time setting mode.

Two Year Limited Warranty

The inner components of this watch are warranted to be free from defects in materials and manufacturer's workmanship for two years from the original date of purchase. Receipt required for proof of purchase date. This warranty does not apply to normal wear and tear or abuse, and excludes the battery, crystal, strap or bracelet. It does not cover costs, parts, labor, defects or damage caused by any source other than Golden State International. Warranty will be void if there is evidence that the case back has been tampered with. Within this warranty period, if you return your watch due to a manufacturer's defect, there are no shipping and handling charges. If the warranty period has expired, shipping and repair charges will apply. The prices of these charges may vary. Please contact the manufacturer for more detailed information. We recommend that you do not get leather straps wet as moisture may cause discoloration.

Water Resistance: Exposure to moisture may result in rust and failure of the metal and/or mechanical portions of the watch. Only watches with the words

"Water Resistant" engraved on their backs may be safely submerged in water. 30M marking is OK for showering, washing, etc. 50M marking is OK for swimming and bathing. The watch will remain water resistant only as long as the crown and case remain intact. Changing your watch battery may alter the water resistance of the watch unless done by an experienced watchmaker or jeweler.

Any implied warranties are also limited to two years from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In the event of a defect or malfunction outside of the two-year period, the watch will be repaired or replaced at our discretion. Please note that GSI reserves the right to substitute a watch of equal or greater value and similar appearance to the returned watch on both in-warranty and out-of-warranty returns/repairs.

Golden State International shall not be liable for any incidental, economic or consequential damages arising from the failure or malfunction of this watch. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Return Information

For any returns or repairs, carefully pack the watch and/or any parts that need to be replaced or repaired. Include your name, address, phone number and reason for return. Send insured, with payment check or money order only (if applicable) to:

Watches purchased in the United States

Golden State International
PO Box 31088
Oakland, CA 94604

Watches purchased in Canada

Golden State International
PO Box 104, Malton CSC
Mississauga, ON L4T 3B5

For the most expedient service we recommend that you send the watch/parts to the above addresses rather than returning to the retailer where it was originally purchased. Any other warranty given by the retailer is the responsibility of the retailer. The terms of this warranty cannot be changed by any person.

If you have any questions regarding your watch, please call Customer Service at 1-800-799-6446 or 1-888-474-0005. You can also refer to our website at www.gsi-usa.com to view and download instructions and/or warranty/repair information for your watch.