

## Combination Trigger Lock

Your lock is factory set to open at "000". To set your personal combination depress the set pin (located on the side of the lock as shown in Fig. 1) with a ball point pen. While continuing to depress the set pin, dial in your own personal code on all three tumblers, then release the set pin. Your new combination is complete. Before installing your trigger lock on your firearm, test your new code by first scrambling the tumblers, then dial in your new code. Twist the top as in fig. 2 to open. You can now safely secure your firearm.

Fig. 1 Trigger lock in closed position.

Fig. 2 Trigger lock in open position.

Fig. 3 Side view of shaft and shaft housing.

Fig. 4 Trigger lock installed onto the trigger guard.

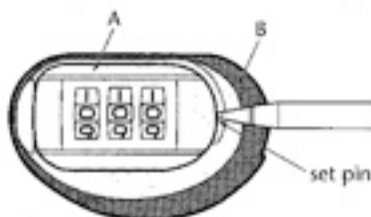


Fig. 1



Fig. 2

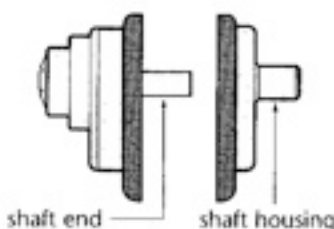


Fig. 3

### How to Attach and Lock

**CAUTION:** Never install this lock onto a loaded gun. A loaded firearm must be handled with caution to avoid risk of accidental injury. Never remove the rubber washers from this lock. The removal of one or both of the rubber washers will render the lock non-functional.

1. Separate both parts of the trigger lock by first turning the dials to your personal code. Turn the lock body "A" counter-clockwise to 90° of lock body "B" as shown in Fig. 2. Pull to separate.

2. Before attaching the lock to the trigger guard, close the lock as shown in Fig. 1. Insert the shaft end through the trigger guard. Hold in place.

3. Insert the shaft housing onto the opposite side of the trigger guard. Make sure the outside edges of both pieces match.

4. Once the two pieces begin to engage, center the lock so that it completely covers the trigger guard. Once in position, press the two ends together tightly. Make sure the lock can not be moved within the trigger guard.

## Operating Instructions



Fig. 4

### Additional Warnings

- Never use a combination number which is known to others, such as your birthday or street address.
- The trigger lock provides additional safety for gun owners. It is not a substitute for other safe gun handling procedures.
- Never store ammunition in the same location as your gun.
- Never store a loaded gun. Never install the trigger lock on a loaded gun.
- The location for storing your gun must be safe and secure.
- Always be certain the gun is unloaded before you install the trigger lock.
- Safety is the responsibility of every gun owner.
- Safety is the first concern when storing or transporting guns.
- Always store guns so that they are not accessible by children or other unauthorized persons, even when the trigger lock is installed.
- Always keep your gun unloaded when it is not in use.
- Guns should only be used by experienced, trained and licensed persons.
- The entire trigger guard must be encased within the rubber gasket.
- The entire trigger guard must be encased within the rubber gasket.
- Do not use the trigger lock if the rubber gasket is damaged or missing.
- The trigger lock should only be used for single trigger guns.
- The trigger guard on the gun must be smaller than the rubber gasket of the trigger lock.

**IMPORTANT:** This product may be effectively attached to most conventional firearms which come equipped with a single trigger and a fixed or non-detachable trigger guard.

## Securecase Co.

2280 Shasta Way, Suite 102, Simi Valley, CA 93065

1-800-922-7656